

BlueBoard-LPC11U14

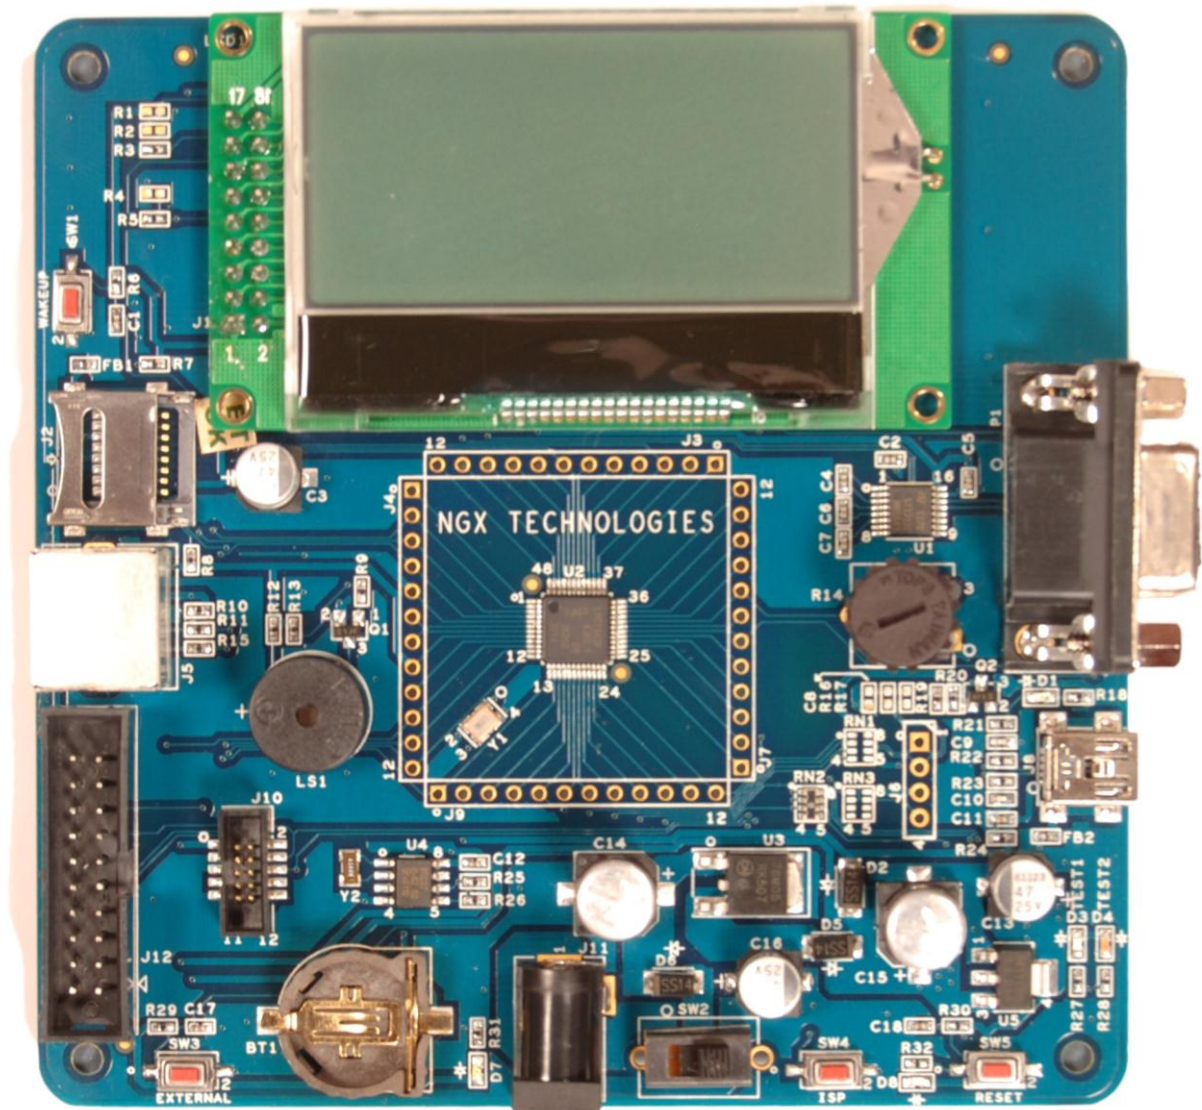


Fig. 1

About NGX Technologies

NGX Technologies is a premier supplier of development tools for the ARM7, ARM Cortex M0, M3 and M4 series of microcontrollers. NGX provides innovative and cost effective design solutions for embedded systems. We specialize in ARM MCU portfolio, which includes ARM7, Cortex-M0, M3 & M4 microcontrollers. Our experience with developing evaluation platforms for NXP controller enables us to provide solutions with shortened development time thereby ensuring reduced time to market and lower development costs for our customers. Our cost effective and feature rich development tool offering, serves as a testimony for our expertise, cost effectiveness and quality.

Contact Information:

NGX Technologies Pvt. Ltd.
No.216, 5th main Road, R.P.C. Layout,
Vijayanagar 2nd Stage,
Bangalore – 560 104
Phone : +91-80-40925507
email:sales@ngxtechnologies.com

CE certification

NGX Technologies BLUEBOARD-LPC11U14 board have been tested for radiated emission as per EN55022 class A standard. The device is under the limits of the standard EN55022 class A and hence CE marked. No other test have been conducted other than the radiated emission (EN55022 class A standard). The device was tested with the ports like USB, Serial, and Power excluding the GPIO ports. Any external connection made to the GPIO ports may alter the EMC behaviour. Usage of this device under domestic environment may cause unwanted interference with other electronic equipment's. User is expected to take adequate measures. The device is not intended to be used in and end product or any subsystem unless the user re-evaluates applicable directive/conformance.

Table of Contents

1.0 INTRODUCTION.....	4
2.0 BLUEBOARD-LPC11U14 Development Tool Setup.....	5
2.1 IDE and debugger.....	5
2.2 Installation & Configuration of LPCXpresso software.....	5
2.3 Setup for NXP LPC-Link and BLUEBOARD-LPC11U14 Board	5
3.0 BLUEBOARD-LPC11U14 firmware Development.....	7
3.1 Executing the sample projects in LPCXpresso	7
3.2 Creating the sample Blinky project in LPCXpresso	11
4.0 BLUEBOARD-LPC11U14 Programming	24
4.1 Programming options	24
4.1.1 On-Chip bootloader (UART)	24
4.2 Flashing the Hex file through UART	25
5.0 Schematic & Board Layout	26
5.1 Schematic	26
5.2 Board layout	26
6.0 CHANGE HISTORY	27
6.1 Change History.....	27
7.0 REFERENCES	27

1.0 INTRODUCTION

This document is the User Manual for the BLUEBOARD-LPC11U14, a low cost ARM Cortex-M0 based board by NGX Technologies. This document reflects its contents which include system setup, debugging, and software components. This document provides detailed information on the overall design and usage of the board from a systems perspective.

Before proceeding further please refer the quick start guide for BLUEBOARD-LPC11U14 features and BLUEBOARD-LPC11U14 verification.

For BLUEBOARD-LPC11U14 quick start guide: [Click here](#).

For the most updated information on the BLUEBOARD-LPC11U14 board please refer to [NGX'website](#).

2.0 BLUEBOARD-LPC11U14 Development Tool Setup

2.1 IDE and debugger

As mentioned in the earlier section, NGX's MCU evaluation platforms are not coupled tightly with any one particular combination of IDE and debugger. The following sections will explain the setup for LPCXpresso and NXP LPC-Link as the IDE and debugger respectively.

2.2 Installation & Configuration of LPCXpresso software

For installation and configuration of LPCXpresso [Click here](#).

*Note: We have used **LPCXpresso version 4.2.2_275** while creating the User manual for this evaluation kit. Please ensure that you are using **LPCXpresso version 4.2.2_275 or above**.*

2.3 Setup for NXP LPC-Link and BLUEBOARD-LPC11U14 Board

The BlueBoard-LPC11U14 board has on board 10 pin SWD/JTAG box, the 10 pin cable is not a part of the BlueBoard-LPC11U14 package, the user needs to buy 10 pin cable separately.

To run the BlueBoard-LPC11U14 examples you need the following components and the image shows the each components:

- NXP LPC-Link
- 10 pin cable
- BlueBoard-LPC11U14 Board
- One USB AM to Mini B cable



Fig.2

Separate the LPCXpresso controller part and use only the NXP LPC-Link. Connections of components are as shown in the following image.

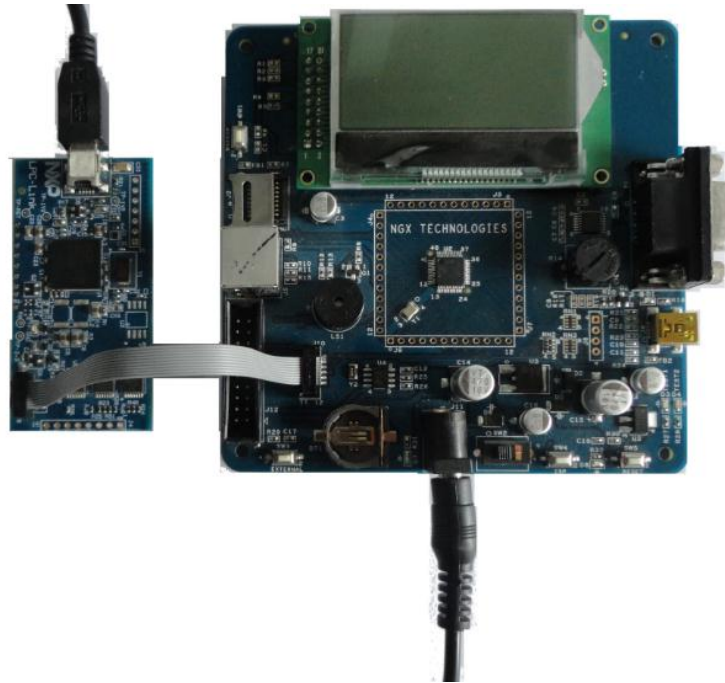


Fig.3

The above setup is ready to use for development in **LPCXpresso IDE**.

3.0 BLUEBOARD-LPC11U14 firmware Development

3.1 Executing the sample projects in LPCXpresso

Please note that the sample programs are available to download once the product is registered.

Steps to execute the sample project:

Step 1: Open LPCXpresso; Browse the folder which contains **BB-LPC11U14_Xpresso_Sample_programs.zip** project and Click OK.

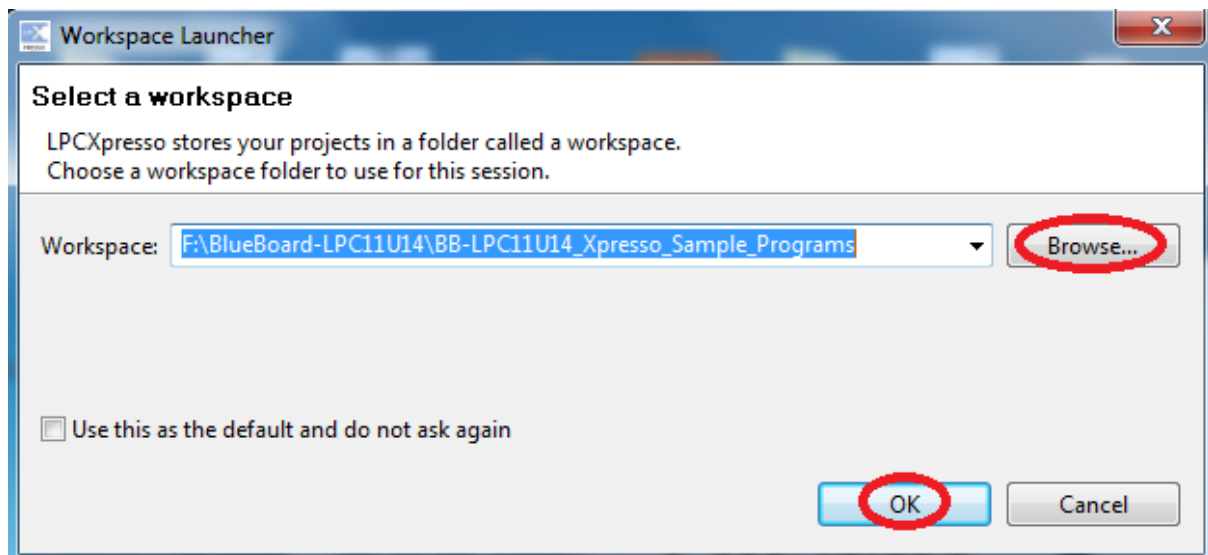


Fig.4

Step 2: Click on Import and Export then Click on Import archived projects (zip).

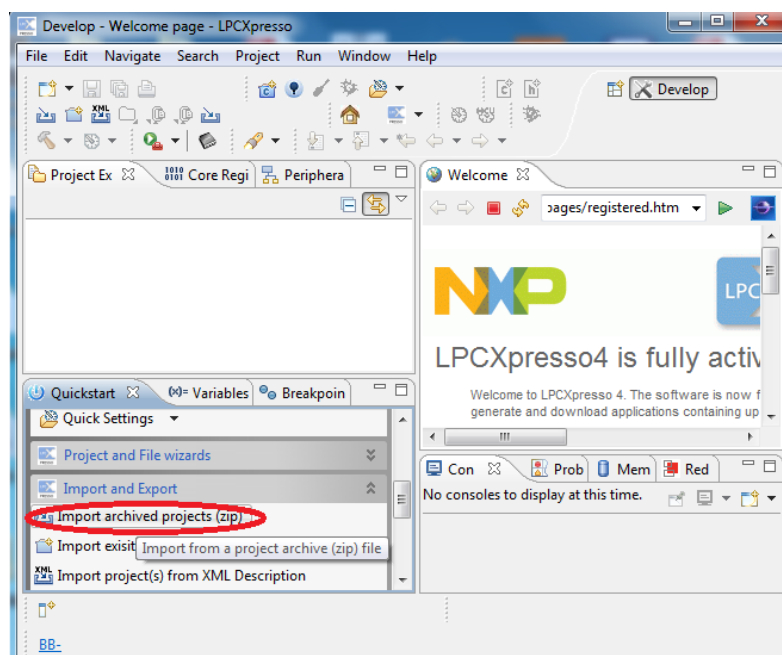


Fig.5

Step 3: Click on Browse to select a archived project (zip) and Click on Open

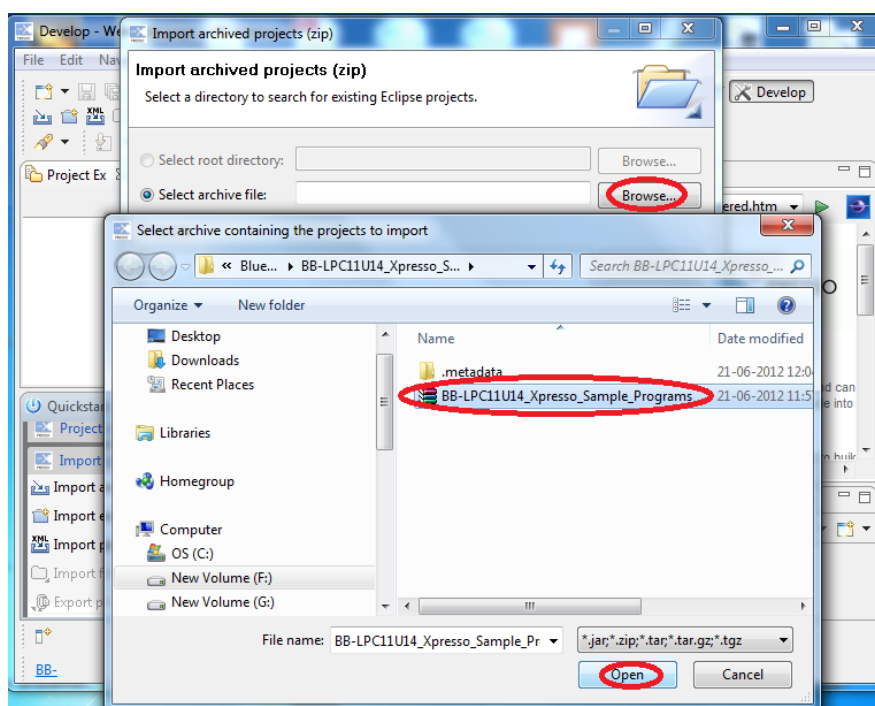


Fig.6

Step 4: Click Finish.

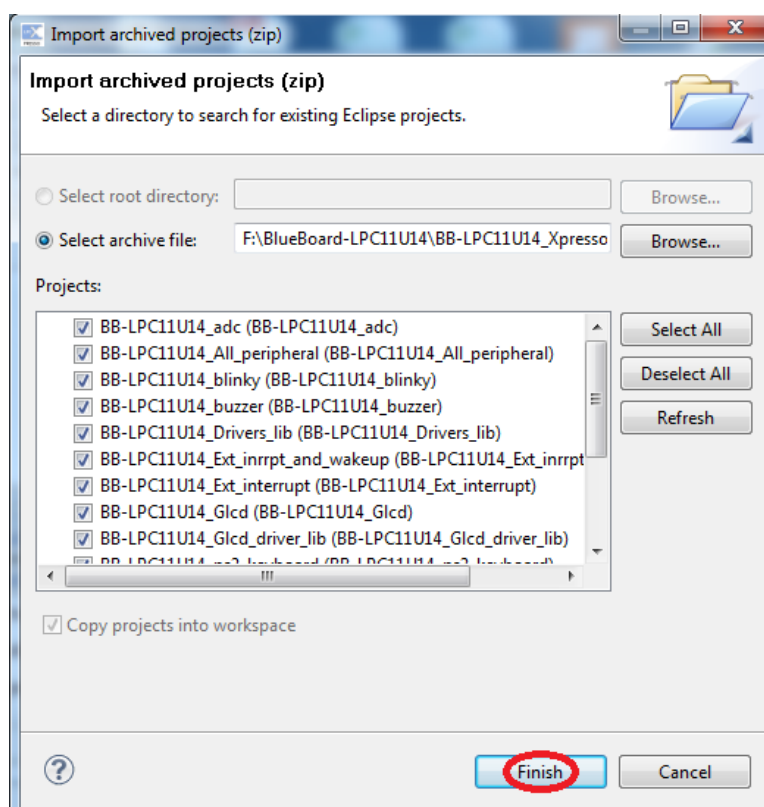


Fig.7

Step 5: First build the BB-LPC11U14_Driver_lib and BB-LPC11U14_Glcd_Driver_lib. To build project Right click on project then click on build Project. For example “BB-LPC11U14_Blinky” as shown in the below image.

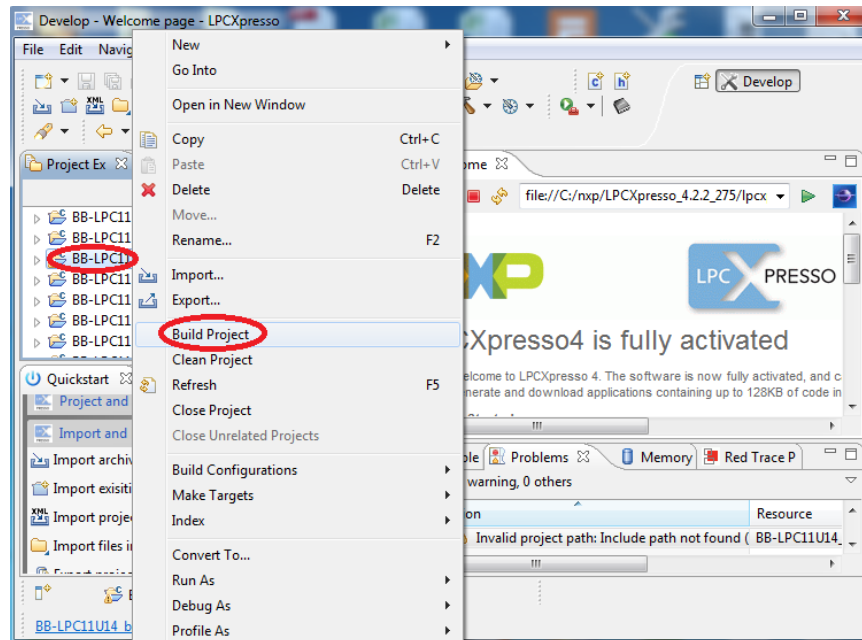


Fig.8

Step 6: After building project Click on Debug.

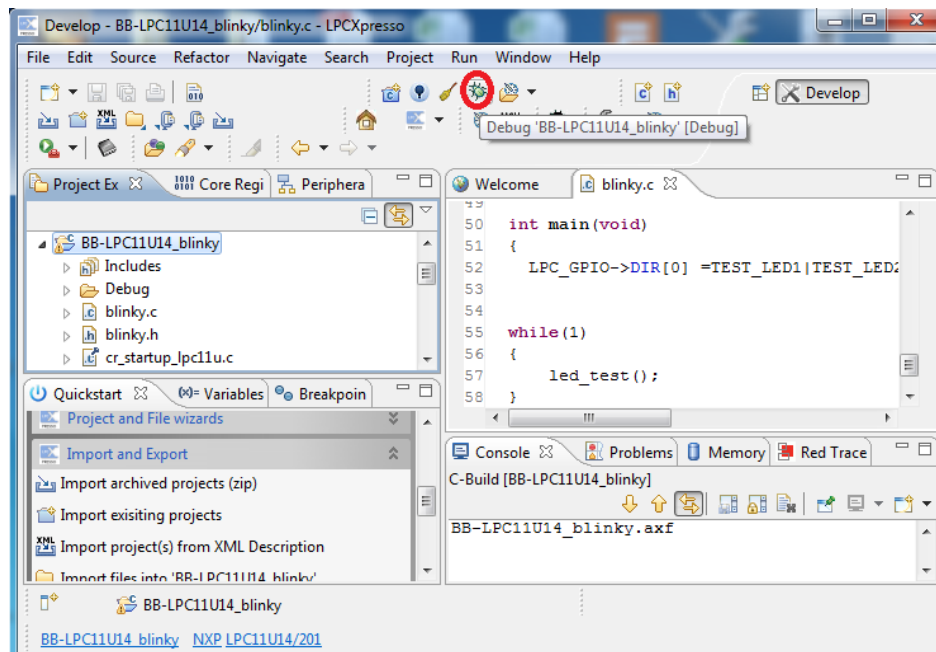


Fig.9

Step 7: Click on Run and select Resume (F8) to start debugging the project. Here the two LED's (D3 and D4) start blinking.

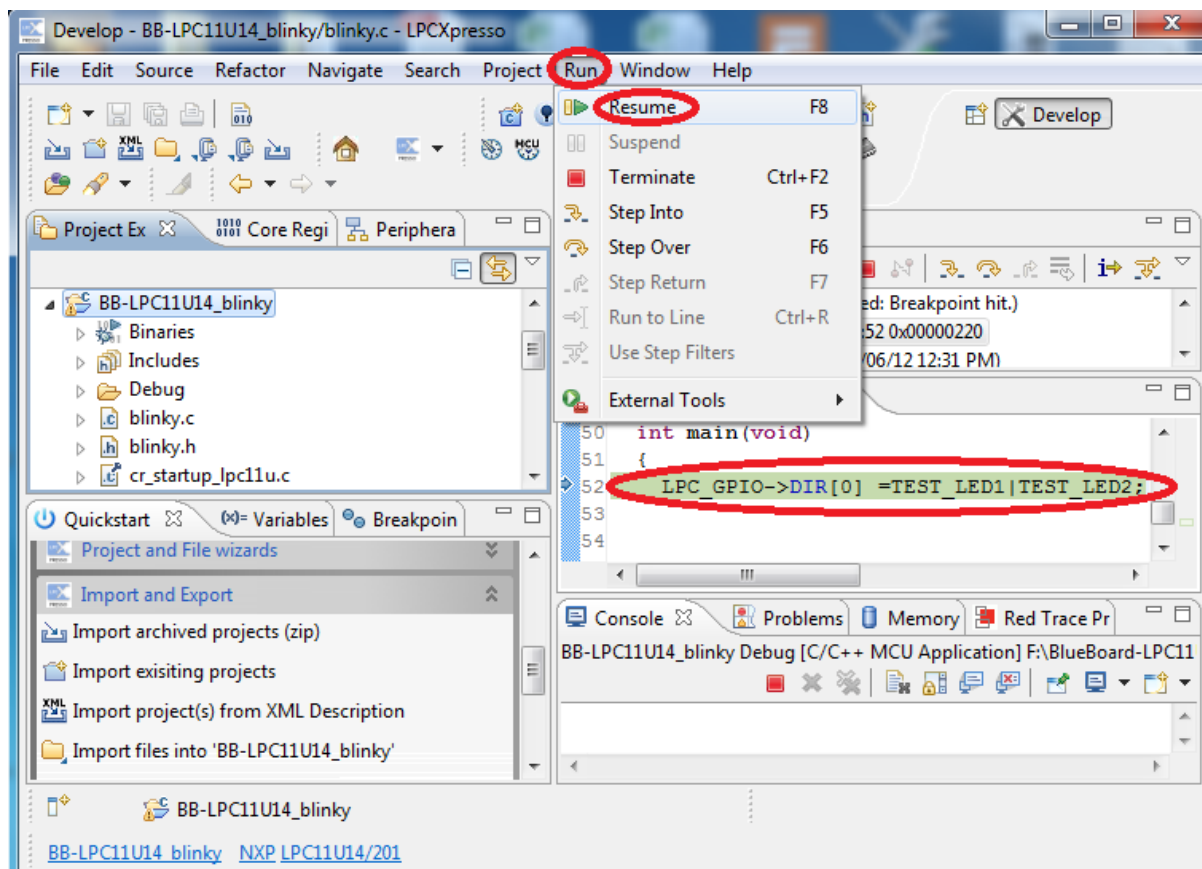


Fig.10

3.2 Creating the sample Blinky project in LPCXpresso

Step 1: Open an LPCXpresso v4.2.2_275 IDE.

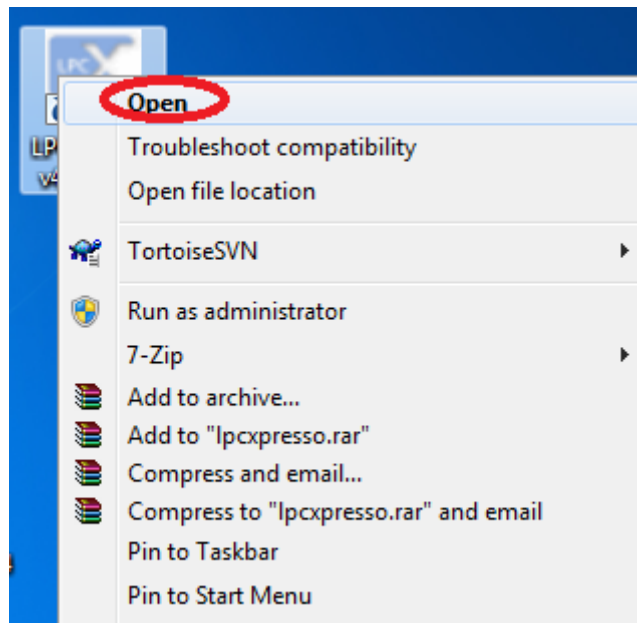


Fig.11

Step 2: Click Browse.. as show below.

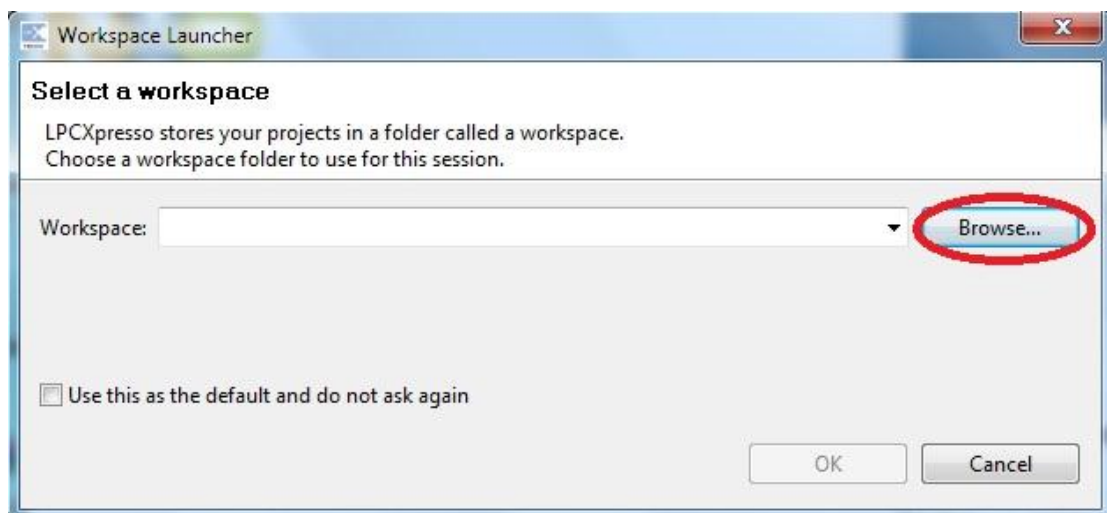


Fig.12

Step 3: Please select BB-LPC11U14_Xpresso_Sample_programs folder which downloaded from website, as shown below image and click OK as shown in below image.

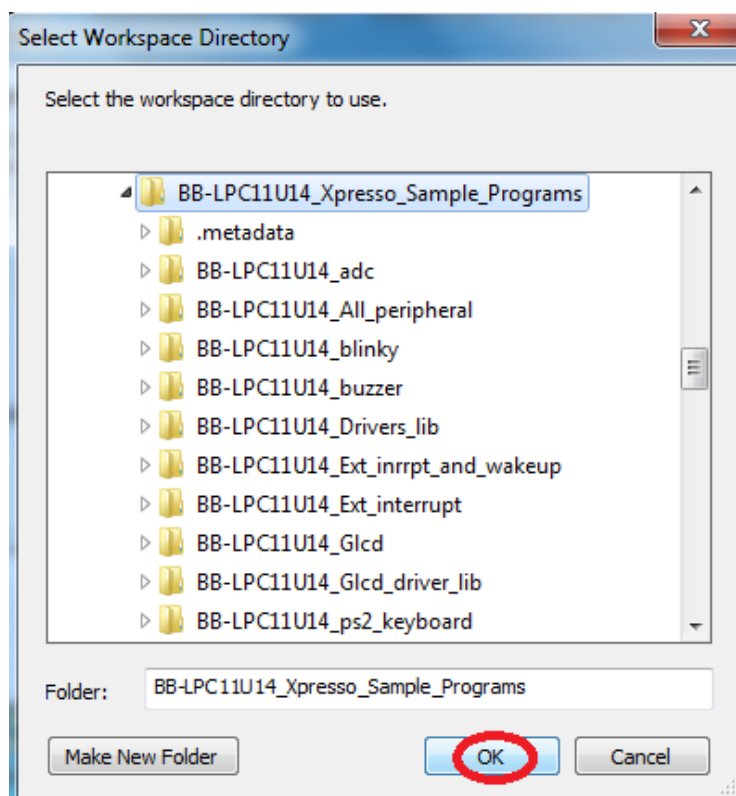


Fig.13

Step 4: Click OK.

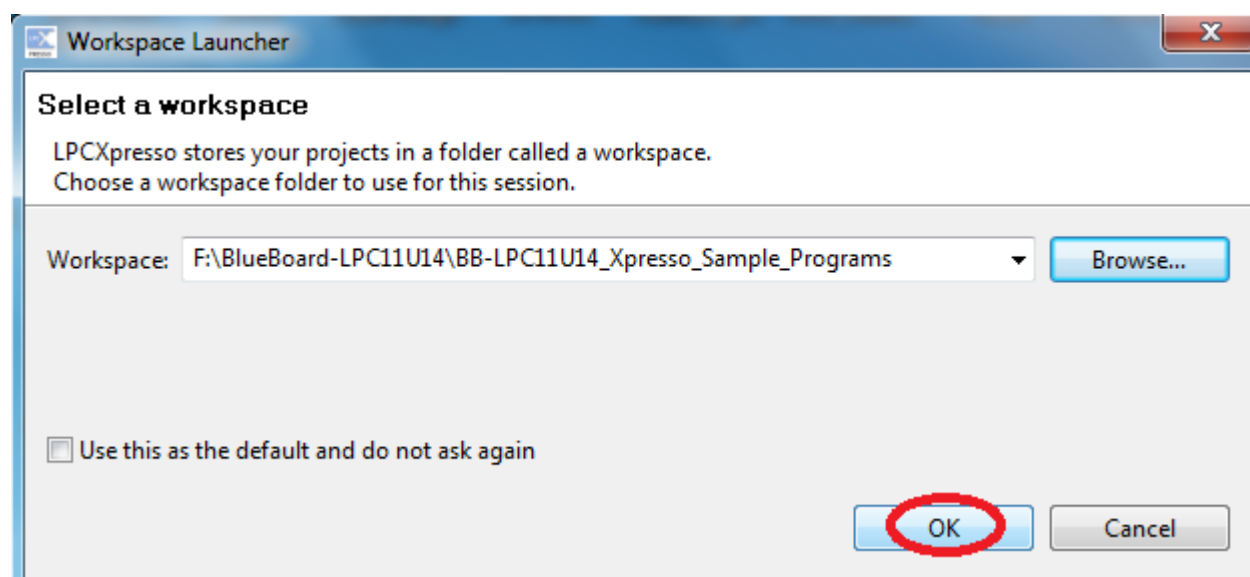


Fig.14

Step 5: Click on File -> New -> Project... as shown below image.

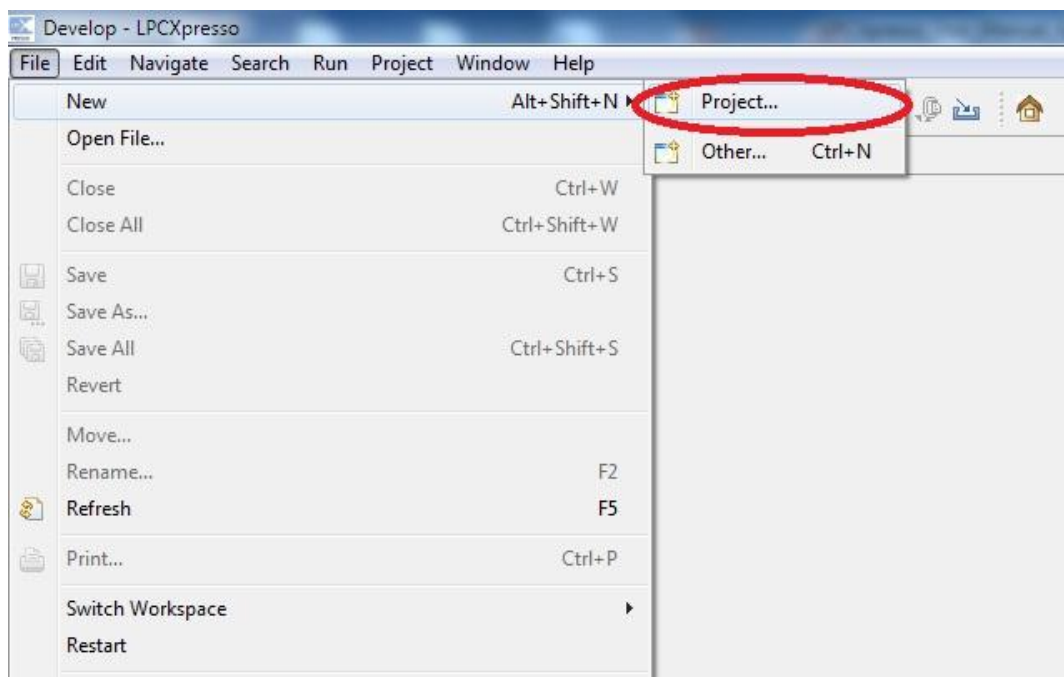


Fig.15

Step 6: Select LPCXpresso C Project and Click Next as shown below image.

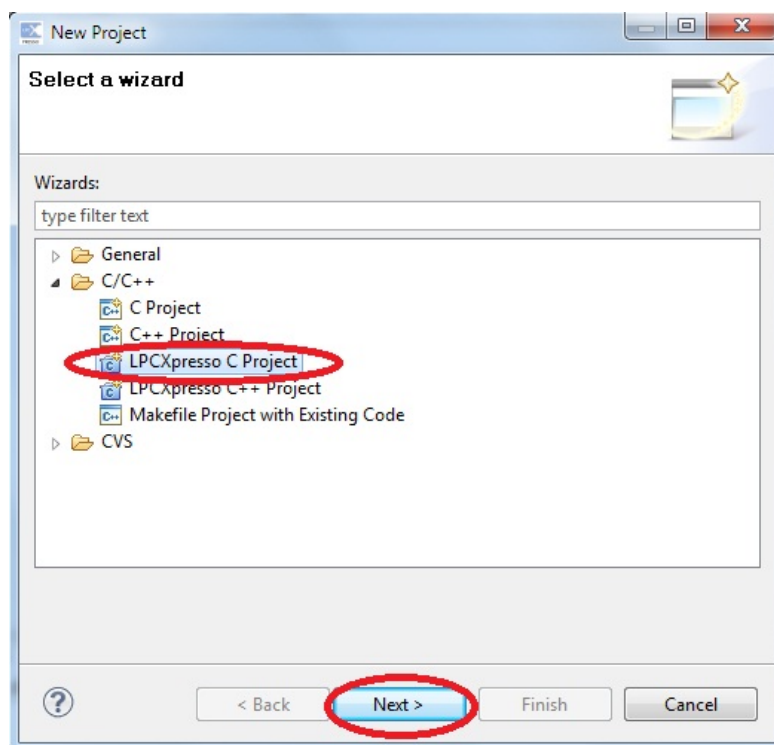


Fig.16

Step 7: Select NXP LPC11U00 projects -> C Project and click Next as shown below image.

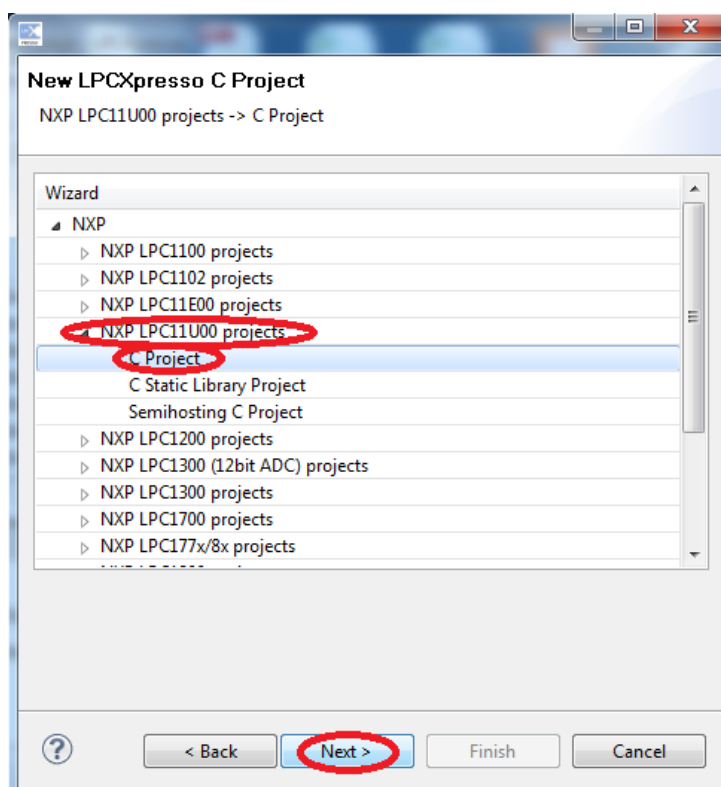


Fig.17

Step 8: Give Project name is Blinky and Click Next.

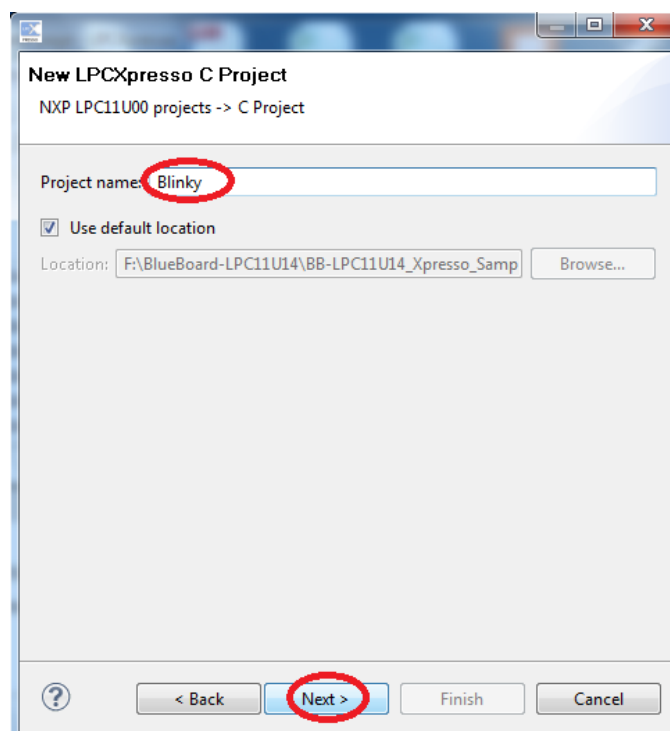


Fig.18

Step 9: Select the target MCU is LPC11U14/201 and click Next as shown in below image.

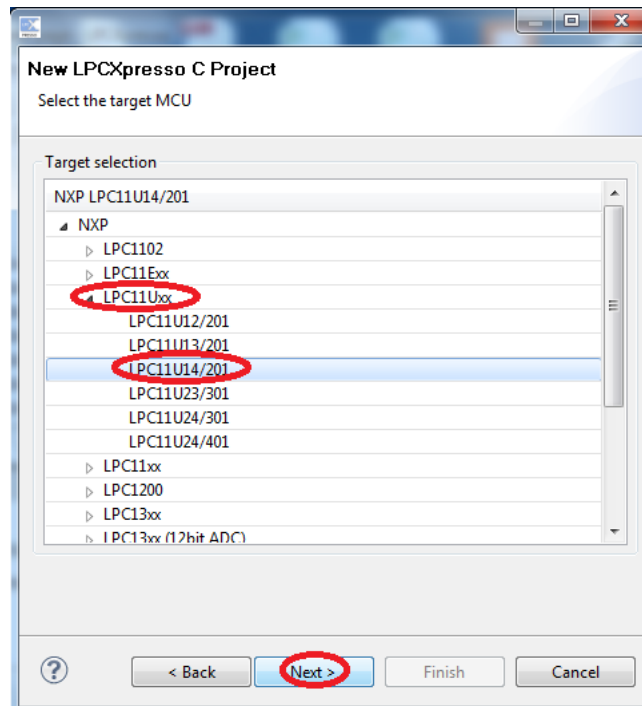


Fig.19

Step 10: Click Finish.

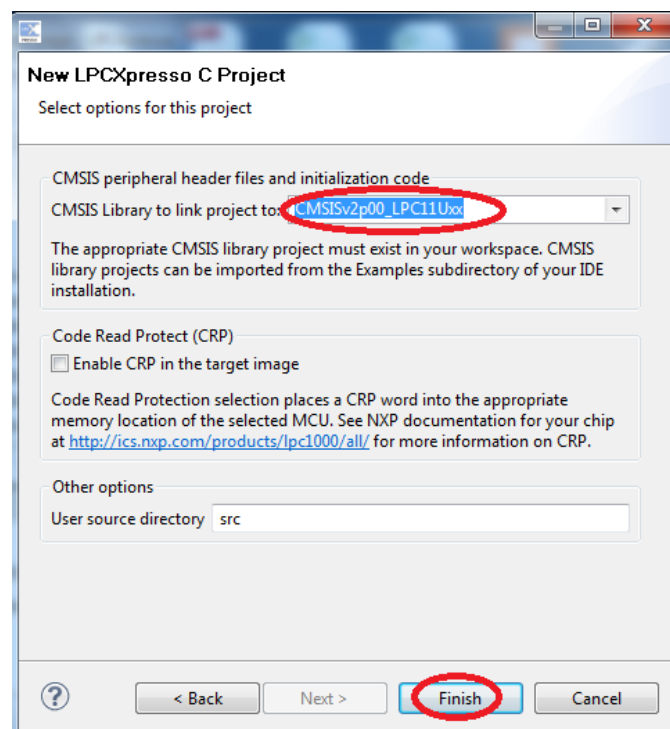


Fig.20

Step 11: The New Blinky Project is created, double click on main.c file as shown below image.

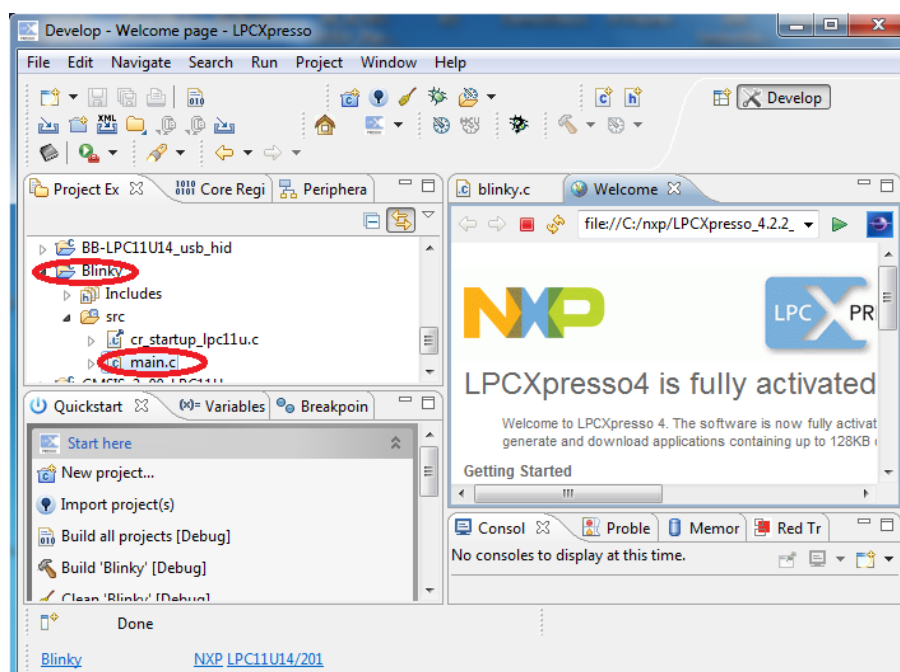


Fig.21

Step 12: After double click the main.c file will open in LPCXpresso as shown in below image

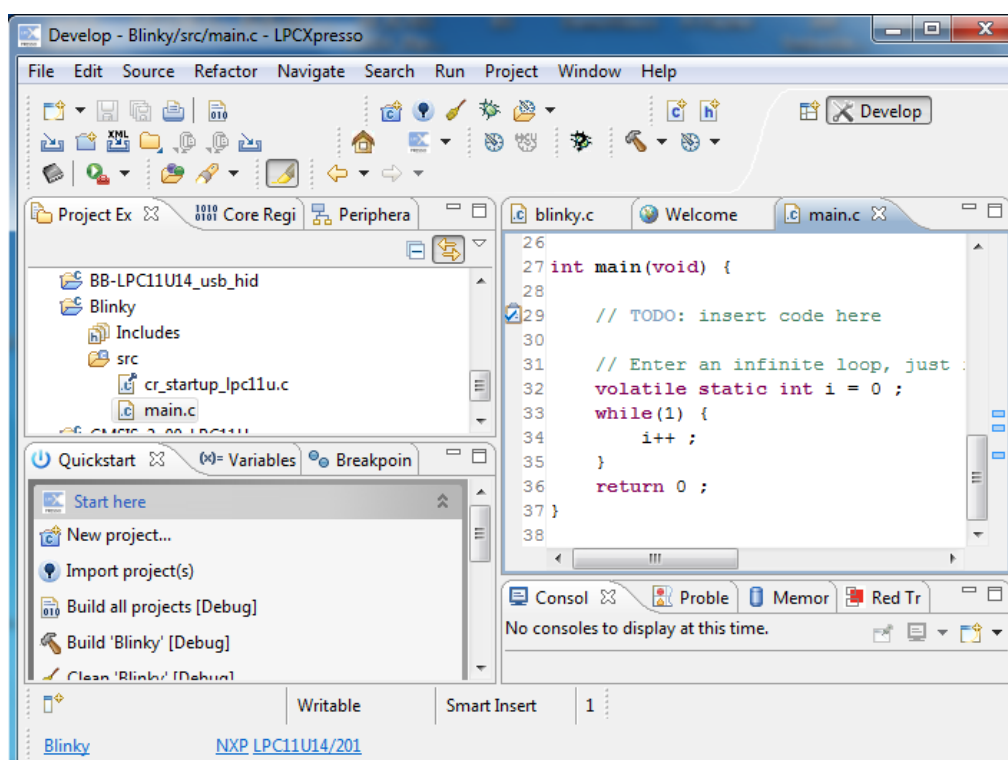


Fig.22

Step 13: Write a C program for LED blinky, after the program Click on Save as shown in below image.
(Note: Writing a C code for Blinky project Please refer Downloaded BB-LPC11U14_blinky example)

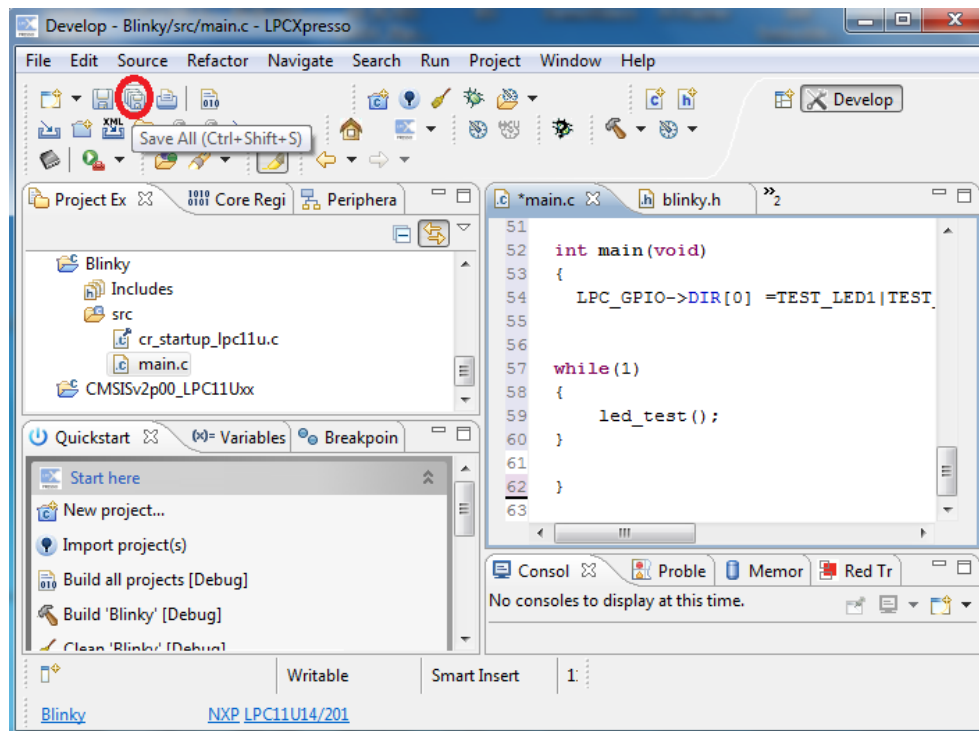


Fig.23

Step 14: To include .h files from BB-LPC11U14_Driver_lib in your project right click on your Project and click on Properties.

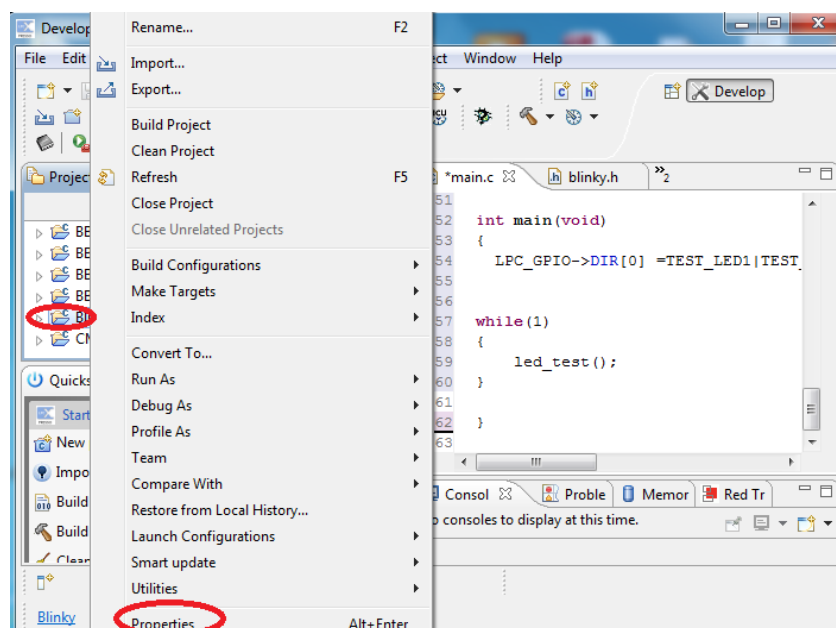


Fig.24

Step 15: Select C/C++ Build ->Settings then Includes, click on Add then click on workspace to select the .h files path as shown below image.

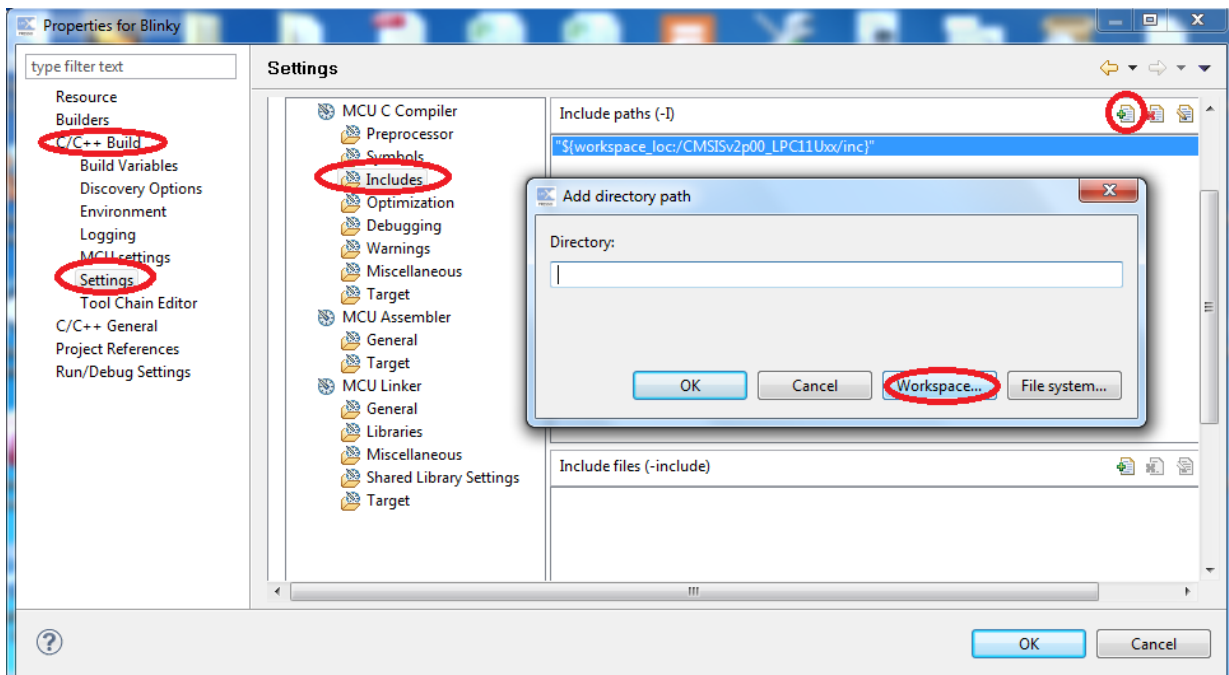


Fig.25

Step 16: Select .h files path then click OK as shown below image.

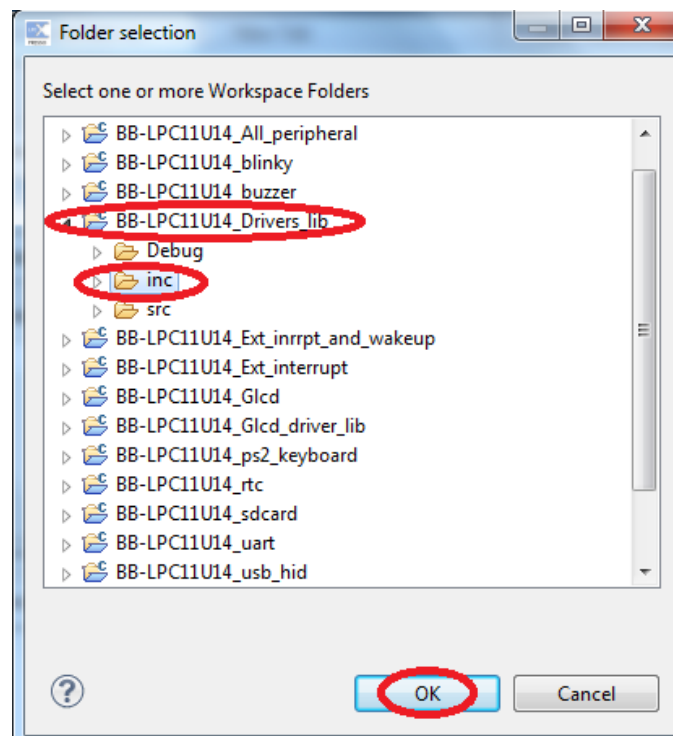


Fig.26

Step 17: Click OK and OK as shown below image.

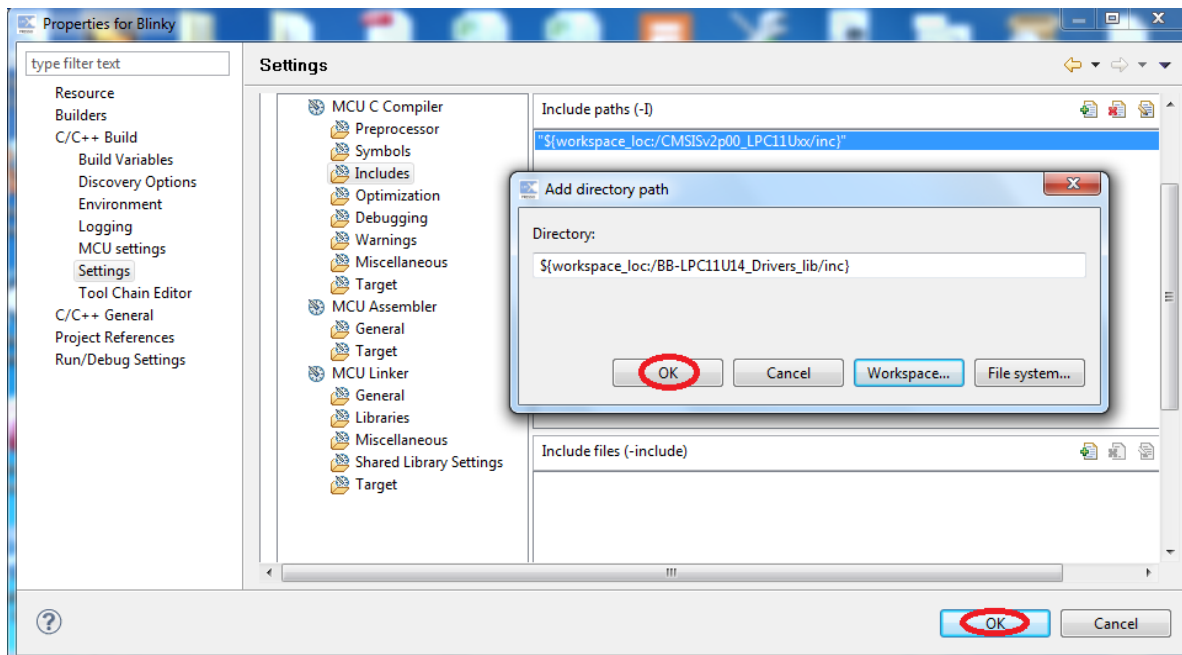


Fig.27

Step 18: To include BB-LPC11U14_Driver_lib in blinky project right click on Blinky Project and click on Properties.

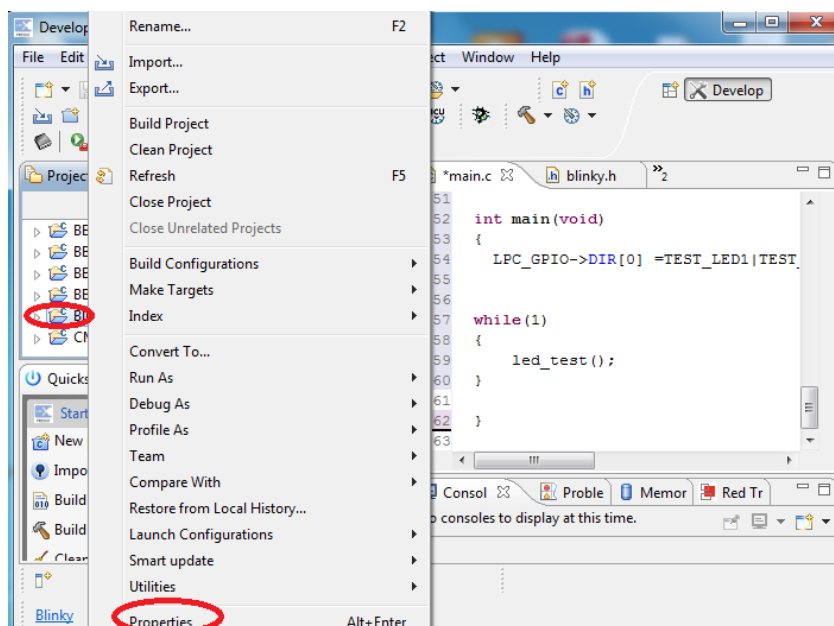


Fig.28

Step 19: Select C/C++ Build ->Settings then Libraries, click on Add, enter the library name then click OK as shown below image.

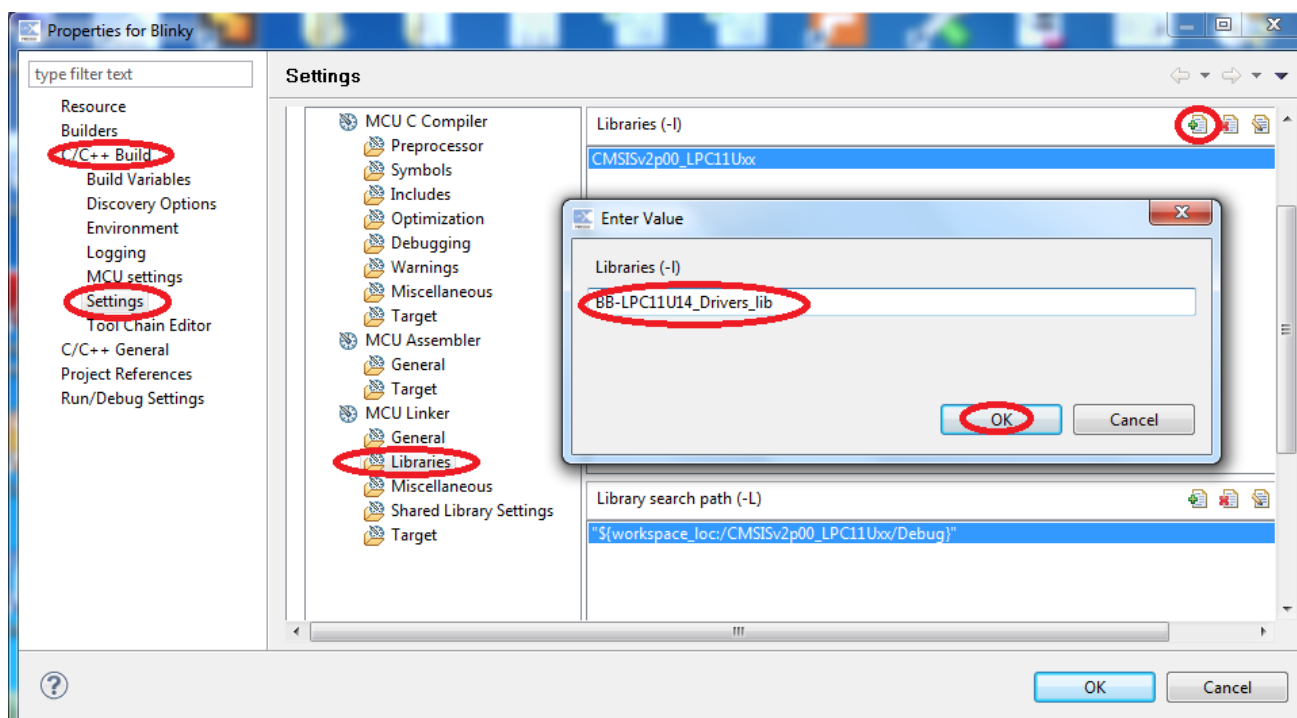


Fig.29

Step 20: Click on Add then click on Workspace as shown below image.

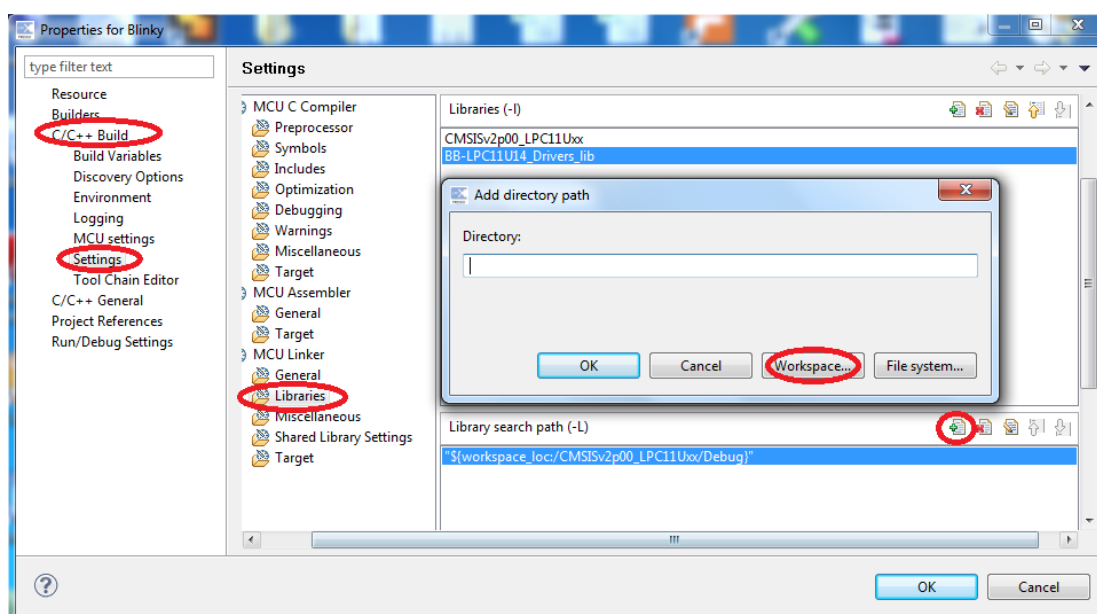


Fig.30

Step 21: Brows the library path then click OK as shown below image.

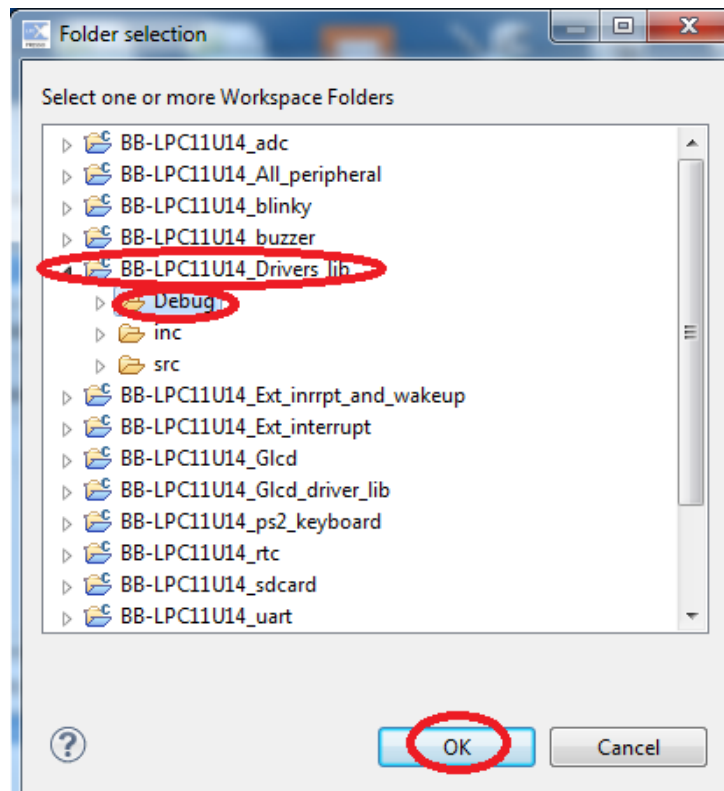


Fig.31

Step 22: Click OK and OK as shown below image.

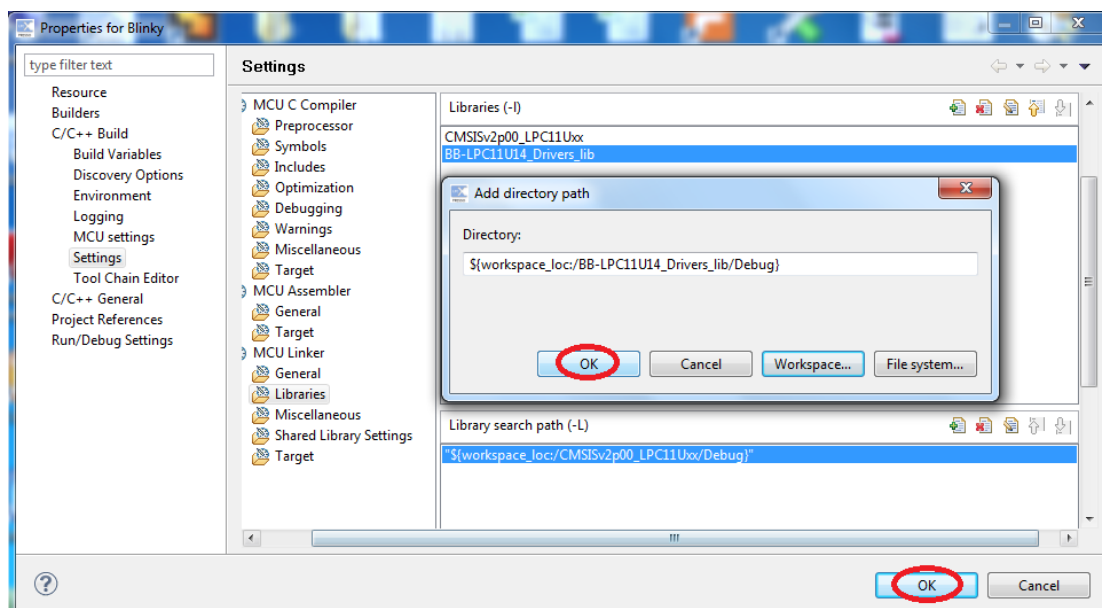


Fig.32

Step 23: Right Click on Blinky Project and click on Build Project, build must be error free.

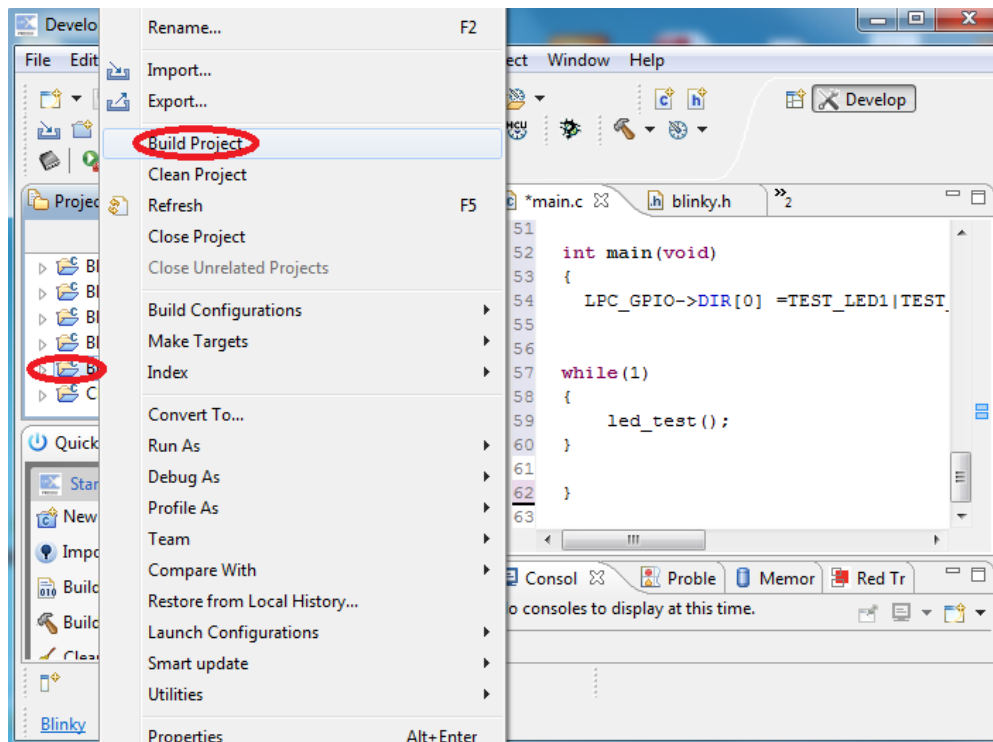


Fig.33

Step 24: After successful build, click on Debug as shown in below image

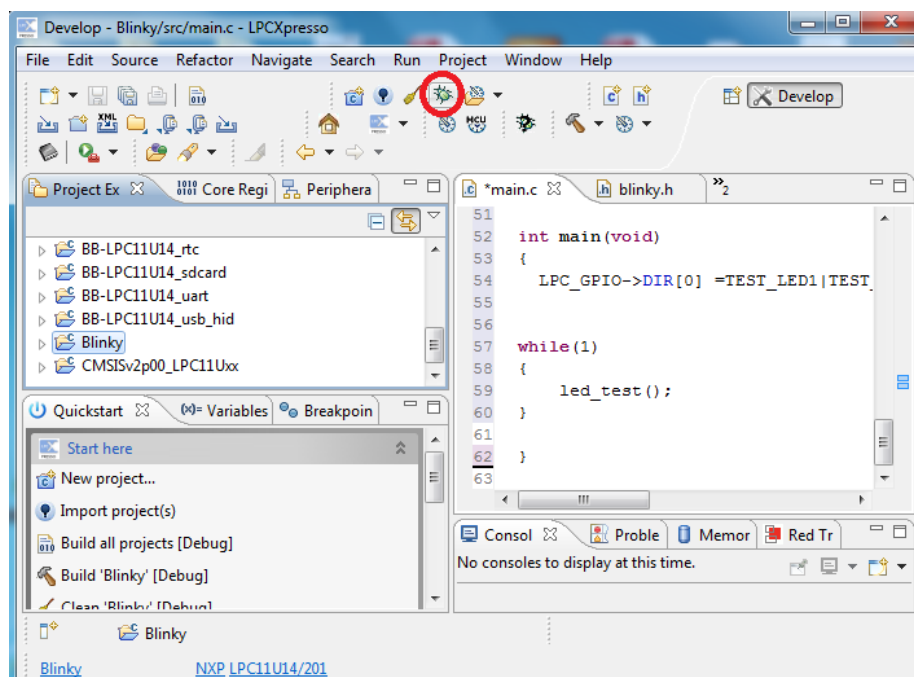


Fig.34

Step 25: Click Resume for free running, the LED D3 and D4 are starts blinking on BB-LPC11U14.

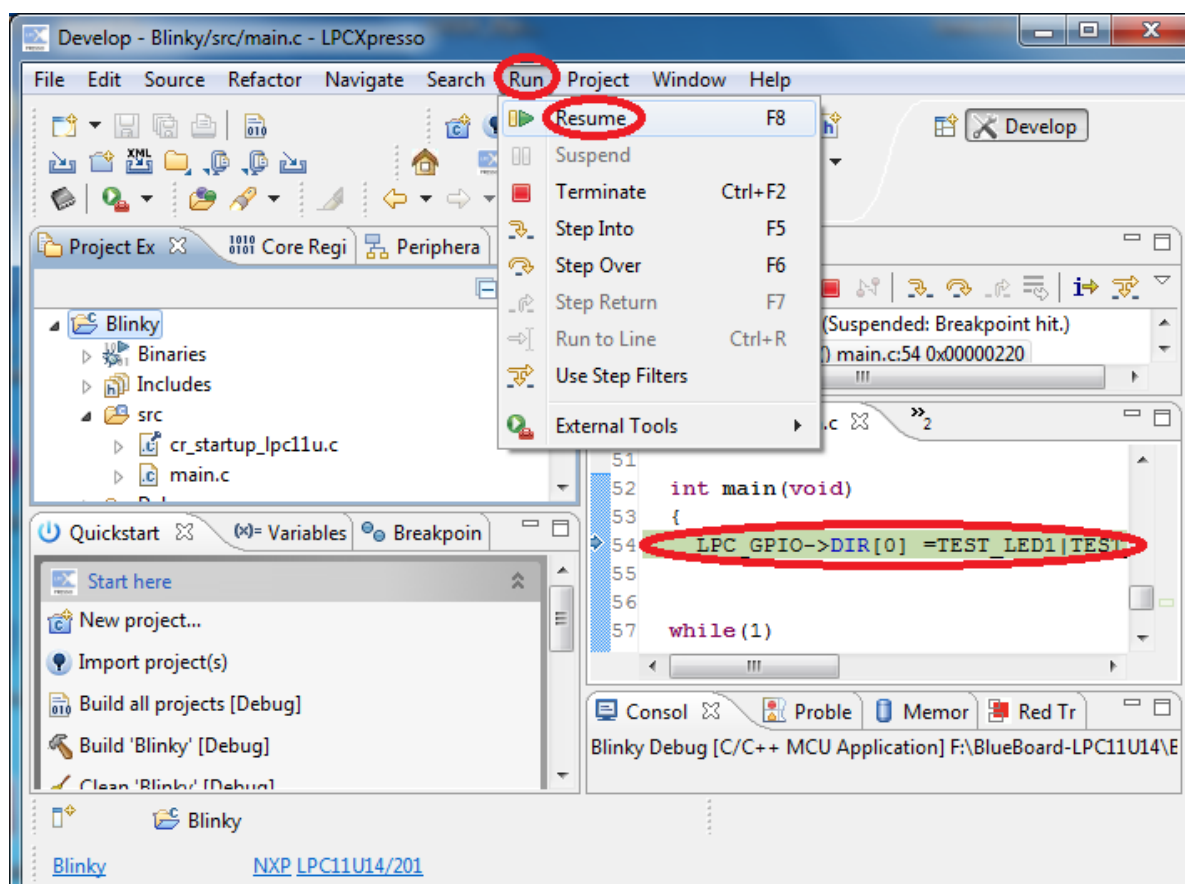


Fig.35

4.0 BLUEBOARD-LPC11U14 Programming

4.1 Programming options

BlueBoard-LPC11U14 can be programmed using the

- On-chip bootloader (UART)
- Debugger (NXP LPC-Link)

4.1.1 On-Chip bootloader (UART)

In order to program the board either through UART we need to get the board under programming mode.

Getting the board in programming mode:

Theory: The On-chip bootloader looks for a logic LOW to be present on a pre-defined PIN (ISP pin) during reset. If the ISP pin is held LOW and reset signal is provided to the MCU, the MCU enters into programming mode.

Practical:

On the BlueBoard-LPC11U14 the RESET and ISP signals are connected to buttons provided on the board. Look for the RESET and ISP marking on the board. Therefore to enter into programming mode:

- ⤴ **Press and hold** the ISP button
- ⤴ Press the RESET button and release it
- ⤴ Now release the ISP button
- ⤴ The board is in the programming mode

4.2 Flashing the Hex file through UART

Step 1: Connect the serial cable to the PC as well as to the board UART0 and open the flash magic tool.

Step 2: Input all the parameters as shown in below Fig.

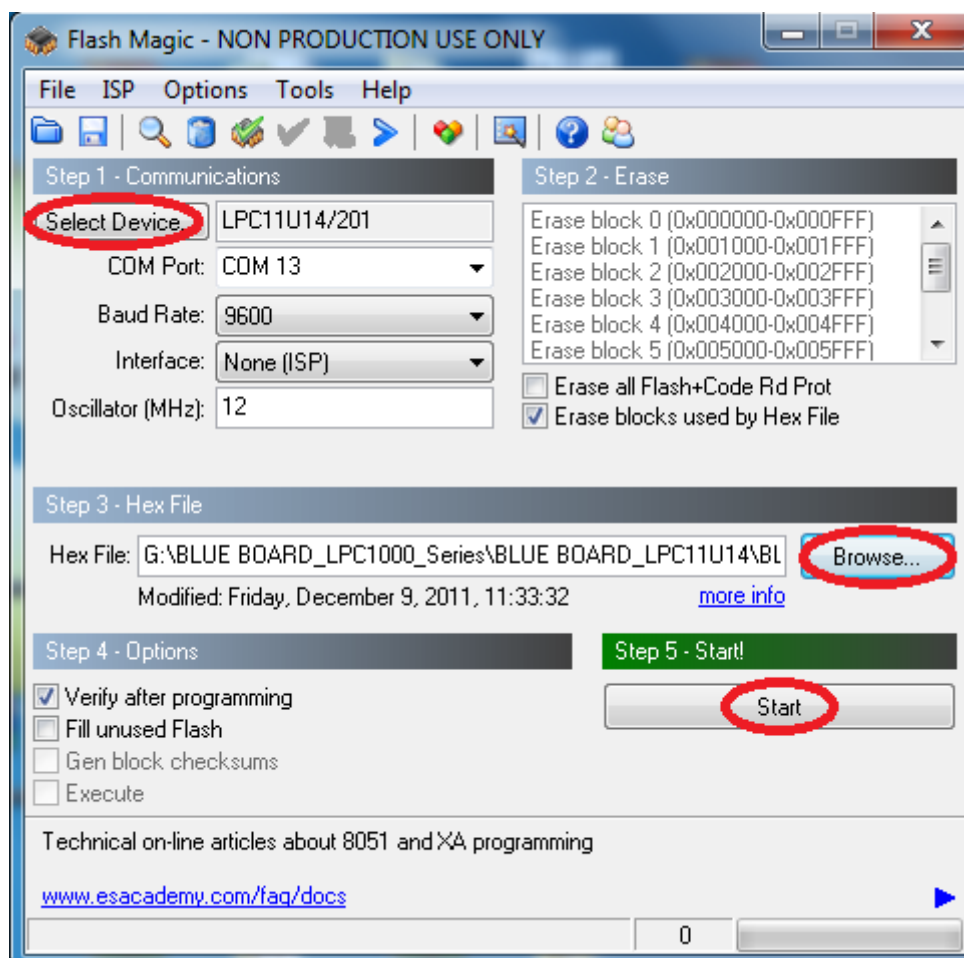


Fig. 36

Step 3: Click **Start** to flash the hex file. Press Reset to run.

NOTE: Make sure that the Board is not powered through USB.

5.0 Schematic & Board Layout

5.1 Schematic

This manual will be periodically updated, but for the latest documentations please check our [website](http://www.ngxtechnologies.com) for the latest documents. The Board schematic and sample code are available after the product has been registered on our website.

5.2 Board layout

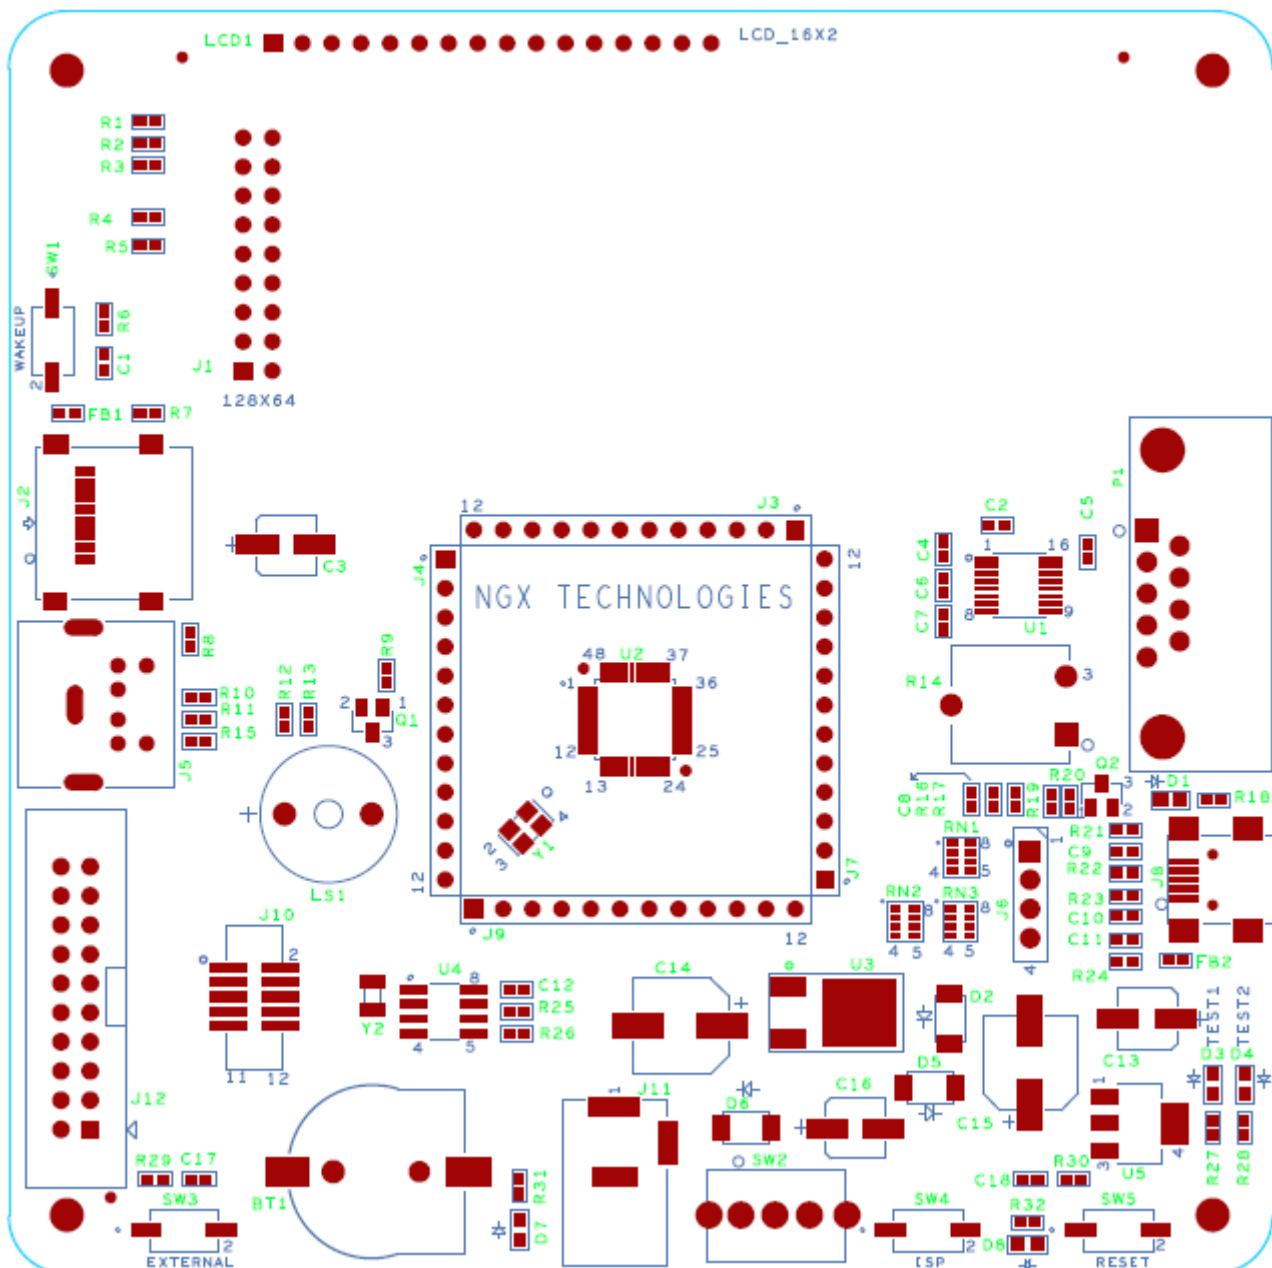


Fig. 37

6.0 CHANGE HISTORY

6.1 Change History

Rev	Changes	Date (dd/mm/yy)	By
1.0	Initial release of the manual	18/06/2012	Veeresh Tumbaragi

7.0 REFERENCES

In addition to this document, the following references are included on the NGX BLUEBOARD-LPC11U14 product and can also be downloaded from www.ngxtechnologies.com:

- NGX BLUEBOARD-LPC11U14 schematic for the Development board.

Additional references include:

- Information on development tool being used:
 - LPCXpresso, <http://lpcxpresso.code-red-tech.com/LPCXpresso/>
 - Flash magic, <http://www.flashmagictool.com/>

About this document:

Revision History

Version: V1.0 author: Veeresh Tumbaragi

Company Terms & Conditions

Legal

NGX Technologies Pvt. Ltd. provides the enclosed product(s) under the following conditions:

This evaluation board/kit is intended for use for ENGINEERING DEVELOPMENT, DEMONSTRATION, and EDUCATION OR EVALUATION PURPOSES ONLY and is not considered by NGX Technologies Pvt. Ltd to be a finished end-product fit for general consumer use. Persons handling the product(s) must have electronics training and observe good engineering practice standards. As such, the goods being provided are not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards. This evaluation board/kit does not fall within the scope of the European Union directives regarding electromagnetic compatibility, restricted substances (RoHS), recycling (WEEE), FCC, CE or UL and therefore may not meet the technical requirements of these directives or other related directives.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies NGX Technologies from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

NGX Technologies currently deals with a variety of customers for products, and therefore our arrangement with the user is not exclusive. NGX Technologies assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages.

No license is granted under any patent right or other intellectual property right of NGX Technologies covering or relating to any machine, process, or combination in which such NGX Technologies products or services might be or are used.

Disclaimers

Information in this document is believed to be reliable and accurate. However, NGX Technologies does not give any representations or warranties, expressed or implied, as to the completeness or accuracy of such information and shall have no liability for the consequences of use of such information.

NGX Technologies reserves the right to make changes to information published in this document, at any time and without notice, including without limitation specifications and product descriptions. This document replaces and supersedes all information supplied prior to the publication hereof.

Trademarks

All referenced trademarks, product names, brands and service names are the property of their respective owners.